

# REG-Router/Modem ADSL, DRMR

Quick Guide to initial operation

 **Rutenbeck**  
Fernmeldetechnik



Please perform the following steps in sequence:

- 1 Connect the device as shown in the manual and switch on the router as well as the PC assigned for operation.**
- 2 Check the correct settings of the network environment via the operating system. From the System control menu select the Network environment submenu and there the TCP/IP protocol item. Under Features the settings should read as follows:**

Required network address range:

IP address:	192.168.0.xxx (except 222), e. g. 192.168.0.30
Subnet mask:	255.255.255.0
Gateway:	192.168.0.111 (DRMR IP, important for internet access)
DNS server:	192.168.0.111

- 3 Start your browser, e. g. the Internet Explorer. To open the Router main menu:**
  - In the address bar of your browser type in the standard address of the router = "http://:192.168.0.111" (drop the "www")
  - Type in the access identification and confirm it. By default, user names are set to "admin" or "user"(depending on the authorization you wish). Both user passwords are "rutenbeck". Your are now in the main menu.
- 4 Now enter the necessary internet access data (be sure to have the access data information of your internet provider available.)**
  - Select the WAN item from the User configuration menu.
  - If necessary, use the right scroll bar until the red marked dialogue boxes are accessible.
  - Fill in the access data of your provider.
  - Accept your inputs by selecting the Modify box at the end of this input page. When you are finished select the Save settings item from the main menu bar on the left side.

## 5 If necessary, modify the network access data:

- Select the "LAN" item from the "User configuration menu".
- If required, modify the "IP address" as well as the "subnet mask" to the given conditions of your network (the first three groups of figures of the IP address and the subnet mask have to be identical in all devices being used in this network. IP addresses must not be assigned twice!).
- Accept your inputs by selecting the Modify box at the end of this input page. When you are finished select the Save settings item from the main menu bar on the left side.



In any case, make sure to note down the taken adjustments, especially the IP address! This information will be mandatory in order to restore access to the main menu in case of further adjustments.

## 6 Check function

- Select the PPP status item in order to check the function of your device. The dialogue boxes must be set to the values "Connection 1" and "Connect". If the settings are correct, PPP-connected will be displayed.
- Click the Execute button.
- Select the ADSL status item in order to check the function of your device.
- The Line status item shows the present activities of your device with regard to the ADSL address (see operating instructions, p. 25).

## 7 Change passwords

- Change the default passwords in order to prevent unauthorized access: Select the User password item and Administrator password item from the main menu.

## 8 Save settings and leave the main menu

- After you have made all the modifications on the respective input pages, always select the Modify or Send button to adopt these settings to your device.
- Before you leave the main menu select the Save Settings item to save the settings and make them effective.
- Leave the main menu by closing your browser.



**Rutenbeck**  
Fernmeldetechnik

Niederwirth 1-10  
58579 Schalksmühle  
Germany  
Phone +49 2355 82-0  
Fax +49 2355 82-105

www.rutenbeck.de  
mail@rutenbeck.de