



# Aufputzgehäuse für Universalmodule UMflex-APG

## Montageanleitung

Das Aufputzgehäuse können Sie universell einsetzen. Zur Montage auf Unterputzdosen werden die in der Grundplatte vorgesehenen schlüselloch-ähnlichen


Langlöcher verwendet. Die Kabel können Sie durch die herausbrechbaren Öffnungen in der Grundplatte führen, bevor Sie die Module konfektionieren.

Bei der Wandmontage benutzen Sie die beiden Langlöcher auf der vertikalen Mitte der Grundplatte und führen die Kabel von oben, unten oder seitlich zu.

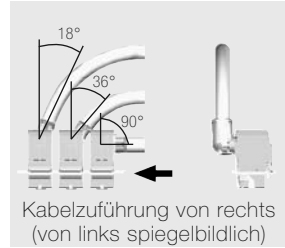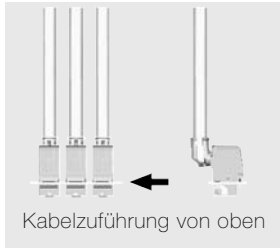


Bereiten Sie die Module entsprechend der Kabelzuführung vor und setzen Sie sie in das Rastblech (Pfeil) ein.


Rastung	Winkel in °
1	18
2	36
3	54
4	72
5	90

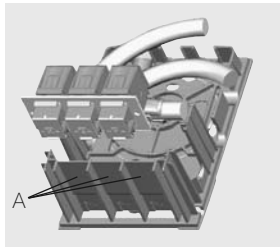

Schneiden Sie diejenigen Modulausbrüche (A) in der Grundplatte aus, für die Sie Module einsetzen und schieben Sie das Rastblech ein.

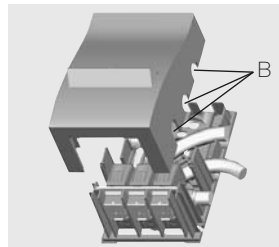

Schneiden Sie in der Abdeckkappe die entsprechenden Durchbrüche (z.B. B) für die Kabel aus.

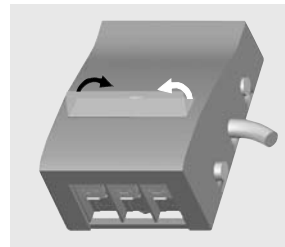

Setzen Sie die Abdeckkappe bündig auf und verriegeln Sie sie mit der Grundplatte durch Einschwenken der Abdeckscheibe (schwarzer Pfeil). Zum Entriegeln öffnen Sie die Abdeckscheibe (weißer Pfeil) und ziehen Sie die Abdeckkappe ab.

## Beschriftungsschilder zum Ausschneiden






# Surface Mounting Housing for Universal Modular Jacks UMflex-ApG

## Installation Instructions

The surface-mounted housing can be used universally. The keyhole-shaped oblong slots in the base plate are used for mounting the housing on flush boxes.


The cables can be inserted through the break-out holes in the base plate before assembling the modules. For wall mounting, use the two oblong slots on the verti-

cal center of the base plate and feed the cables from above, below or the side.

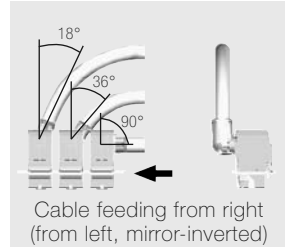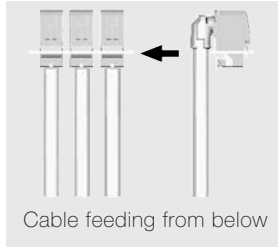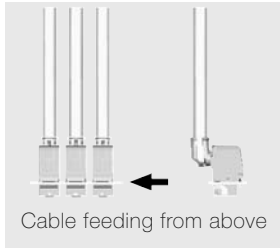


Prepare the modules for the cable feeding arrangement and insert them in the locking plate (arrow).


Locking	Angle in °
1	18
2	36
3	54
4	72
5	90

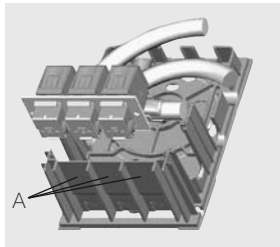

Cut out the module break-outs (A) in the base plate for which modules will be inserted and push in the locking plate.

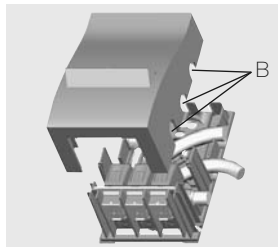

Cut out the corresponding feedthroughs (e.g. B) for the cables in the cover.

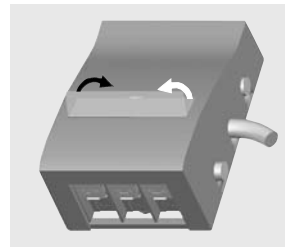

Set the cover on flush and lock it onto the base plate by closing the cover plate (black arrow). To release, open the cover plate (white arrow) and pull the cover off.

### Labelling strips for cutting out

